

SH7146/SH7149 Group

A/D Conversion in Continuous Scan Mode

1. Introduction

This application note describes the procedure to execute the sample program on the Renesas Technology CPU board with the E10A-USB emulator.

1.1 Specifications

Use the A/D converter to convert analog signals to digital numbers in continuous scan mode for three times on analog input channels 8 to 11 (AN8 to AN11). The converted data are stored in RAM.

1.2 Modules Used

- 10-bit A/D converter

1.3 Applicable Conditions

MCU	SH7149
Operating Frequency	Internal clock: 80 MHz Bus clock: 40 MHz Peripheral clock: 40 MHz
Integrated Development Environment	Renesas Technology Corp. High-performance Embedded Workshop Ver.4.04.01
C compiler	Renesas Technology SuperH RISC engine Family C/C++ compiler package Ver.9.02 Release 00
Compiler options	-cpu=sh2 -include="\$(WORKSPDIR)\inc" -object="\$(CONFIGDIR)\$(FILELEAF).obj" -debug -gbr=auto -chgincpath -errorpath -global_volatile=0 -opt_range=all -infinite_loop=0 -del_vacant_loop=0 -struct_alloc=1 -nologo

1.4 Directory Configuration of the Sample Program

The sample program consists of the following directories.

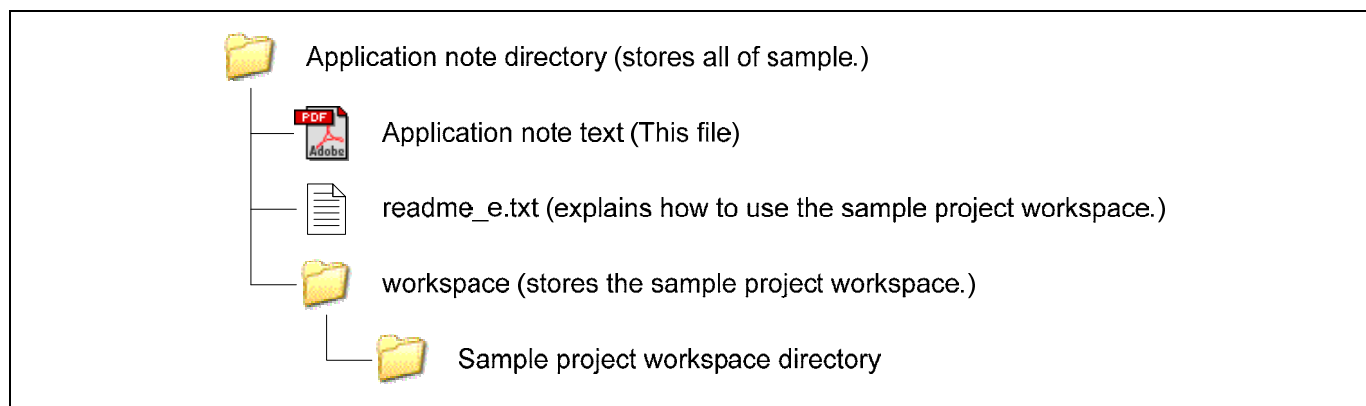


Figure 1.1 Directory Configuration

Note: Names of the application note directory, application note text (this file), or sample project workspace directory depends on the application note referred.

2. Downloading the Sample Project Workspace

Copy the "sample project workspace directory" into the working directory of the host computer ("WorkSpace"). When the sample project workspace directory is created with a read-only attribute, cancel the read-only attribute. Do not use double-byte characters in the directory path. Presence of such characters may cause the wrong operation of the cross tools.

The explanation below assumes that the sample project workspace directory has been copied to the working directory of "C:\WorkSpace".

3. CPU Board and E10A-USB Startup Procedure

- (1) Connect the host computer and the E10A-USB emulator.
- (2) Connect the CPU board and the E10A-USB emulator. (Do not turn ON the power for the CPU board yet.)
- (3) Select [Start] menu, -> [All Programs] -> [Renesas] -> [High-performance Embedded Workshop] (folder)
-> [High-performance Embedded Workshop].
- (4) The [Welcome!] dialog box shown below will appear.
- (5) Select the "**Browse to another project workspace**" radio button, and click "OK".

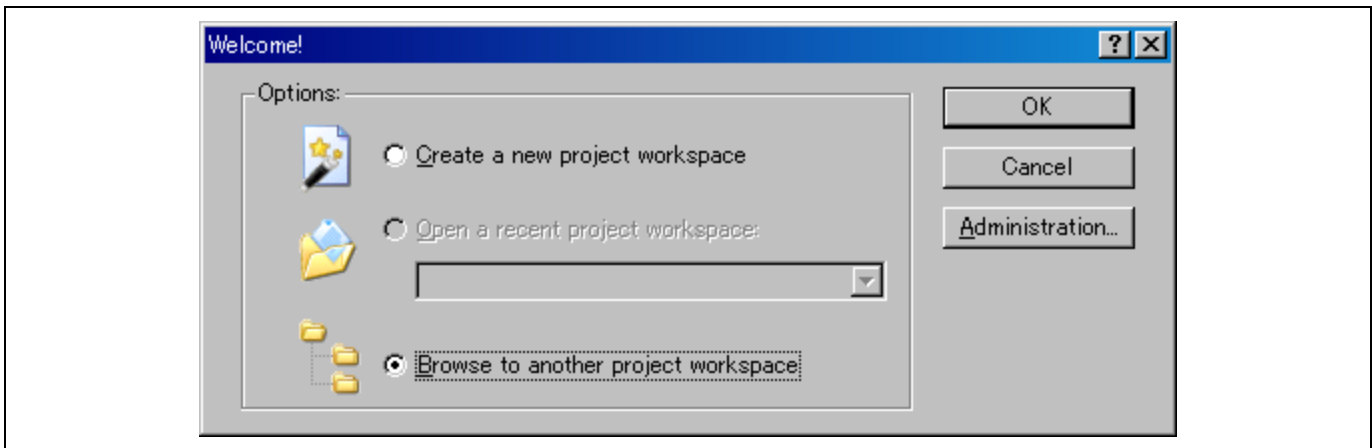


Figure 3.1 [Welcome!] Dialog Box

Note: A project workspace is a user's working area to store projects and their configurations. A project consists of a configuration necessary to create programs or final binary files and a set of files. For more information about the project workspace, refer to the "SuperH RISC engine High-performance Embedded Workshop 4 User's Manual".

(6) The [Open Workspace] dialog box shown below will appear. Specify the directory as below in the dialog box. This application note describes an example to execute the "sh7149_adc_1cycle".

- Directory that stores the sample project workspace:

"C:\WorkSpace\sh7149_adc_1cycle"

(7) After specifying the directory, select the following file and click "Select" to open.

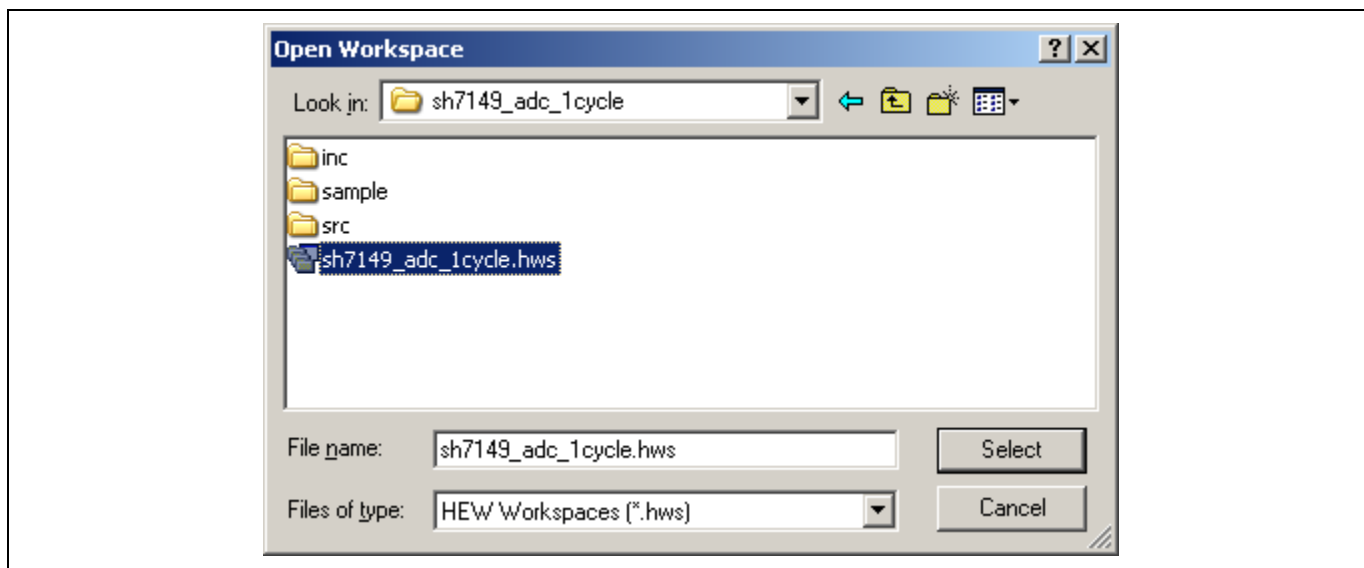


Figure 3.2 [Open Workspace] Dialog Box

Note: The dialog box that indicates the directory in the workspace has been moved may appear at the first time. Click "Yes" to continue.

(8) The [Select Emulator mode] dialog box will appear. Select the item for the Device and for the Mode. Then, click "OK".

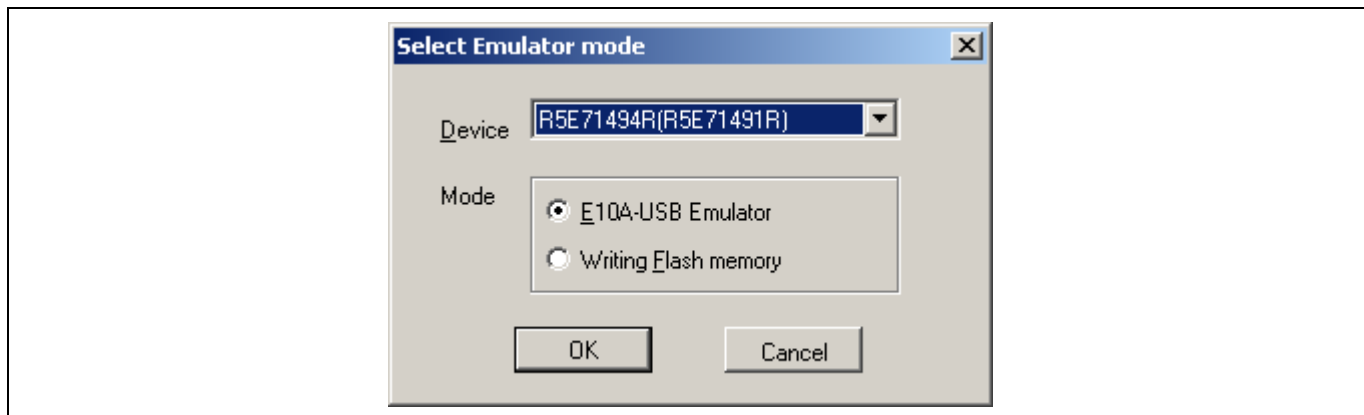


Figure 3.3 [Select Emulator mode] Dialog Box

Note: A message "Please choose driver" will appear at the first time. Click "OK" to show the following window to select the driver. Select "Renesas E-Series USB Driver".

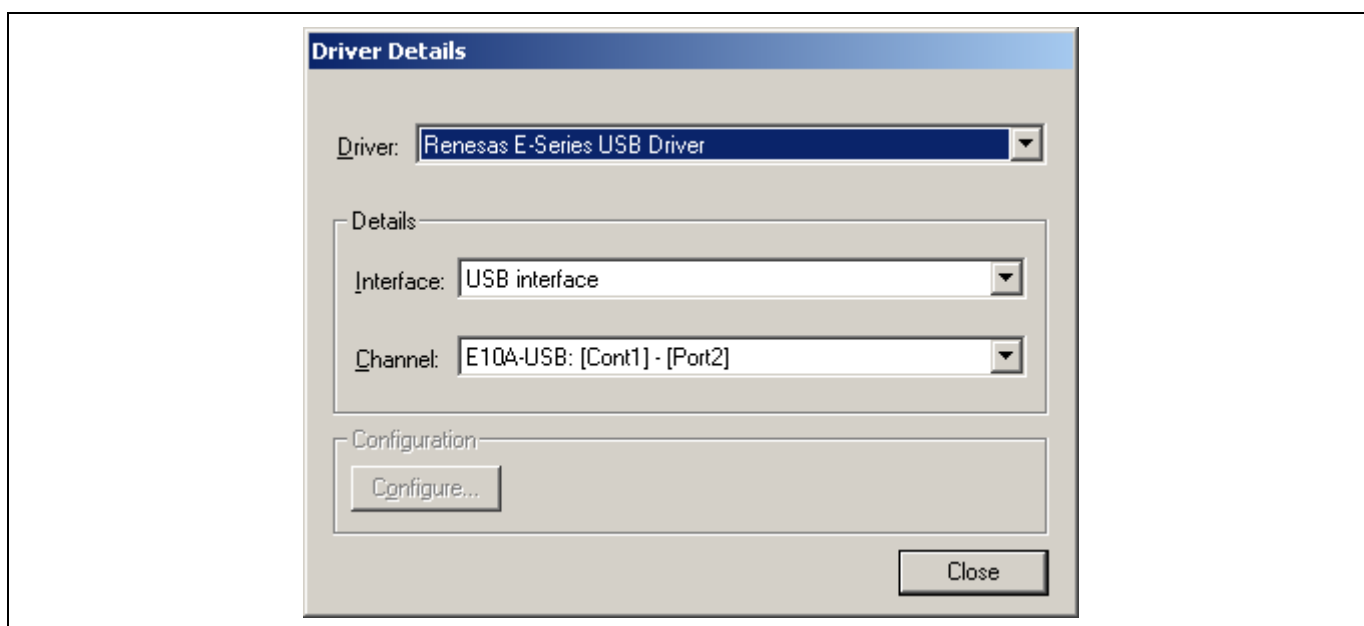


Figure 3.4 [Driver Details] Dialog Box

- (9) Following dialog box will appear. Leave the dialog box, and turn ON the power for the CPU board. Then, press the reset button on the CPU board and click "OK" on the dialog box as shown in Figure 3.5.

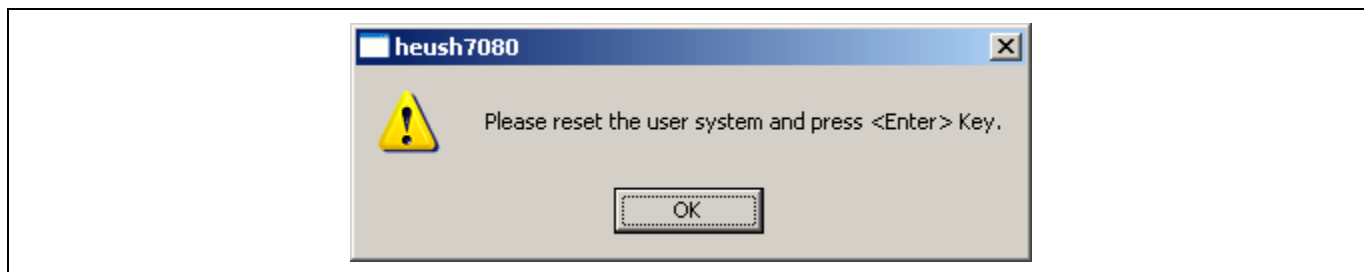


Figure 3.5 Dialog Box to request the Reset signal input

- (10) The [System Clock] dialog box will appear. Enter the input clock frequency for the target device, and click "OK". 10.00 (MHz) is entered in this example.

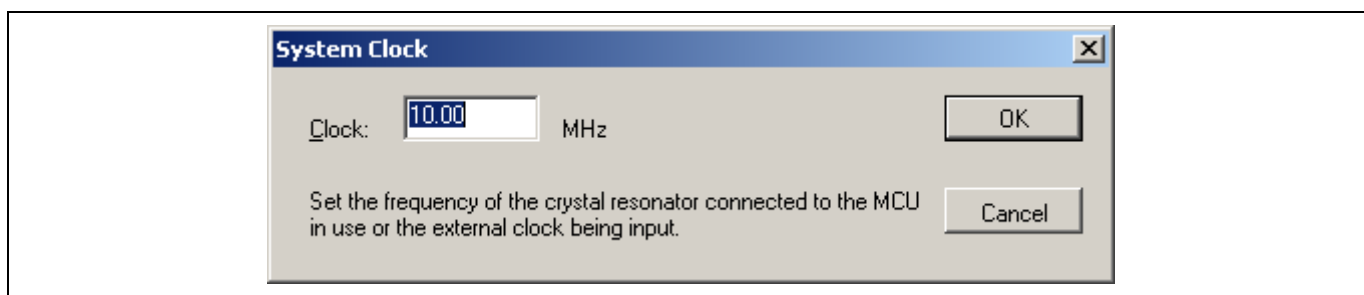


Figure 3.6 [System Clock] Dialog Box

- (11) The [ID Code] dialog box will appear. Enter a desired ID code (within eight alphanumeric characters), tick the [New ID code] check box, and click "OK". This eight-digit ID code is necessary for the securing the flash memory.

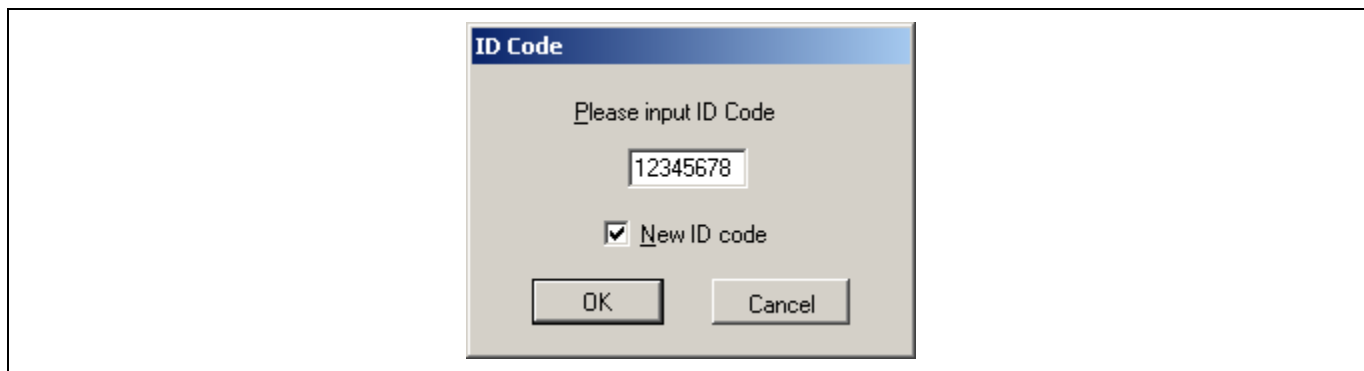


Figure 3.7 [ID Code] Dialog Box

Note: For securing the flash memory, enter a desired ID code; however, "H'FFFFFFF" cannot be set as the ID code. When activating the High-performance Embedded Workshop on the E10A-USB emulator mode after this setting, enter the ID code that is set here, and clear the [New ID code] check box. When entering the wrong ID code or [New ID code] check box is not cleared, the content of flash memory will be erased.

(12) The [Connecting] dialog box will appear, and the system starts to connect the E10A-USB emulator.

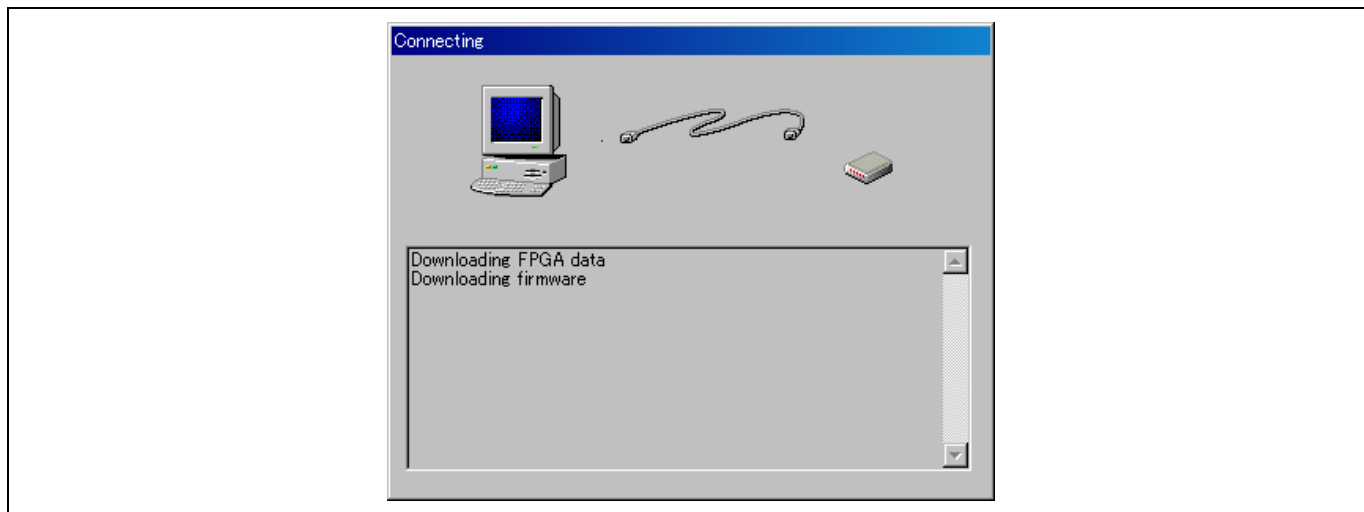


Figure 3.8 [Connecting] Dialog Box

Note: If the reset signal cannot be detected, the dialog box below will appear. Click "Retry", and press the reset button on the CPU board. The window as Figure 3.5 will appear, and press the reset button on the CPU board again.

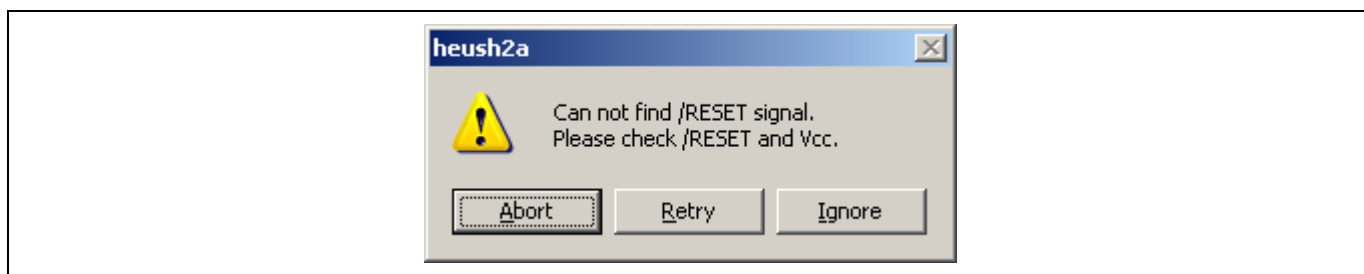


Figure 3.9 [Cannot find/RESET signal] Dialog Box

- (13) When the message "Connected" appears in the [Output] window of High-performance Embedded Workshop, the E10A-USB emulator startup is now completed.

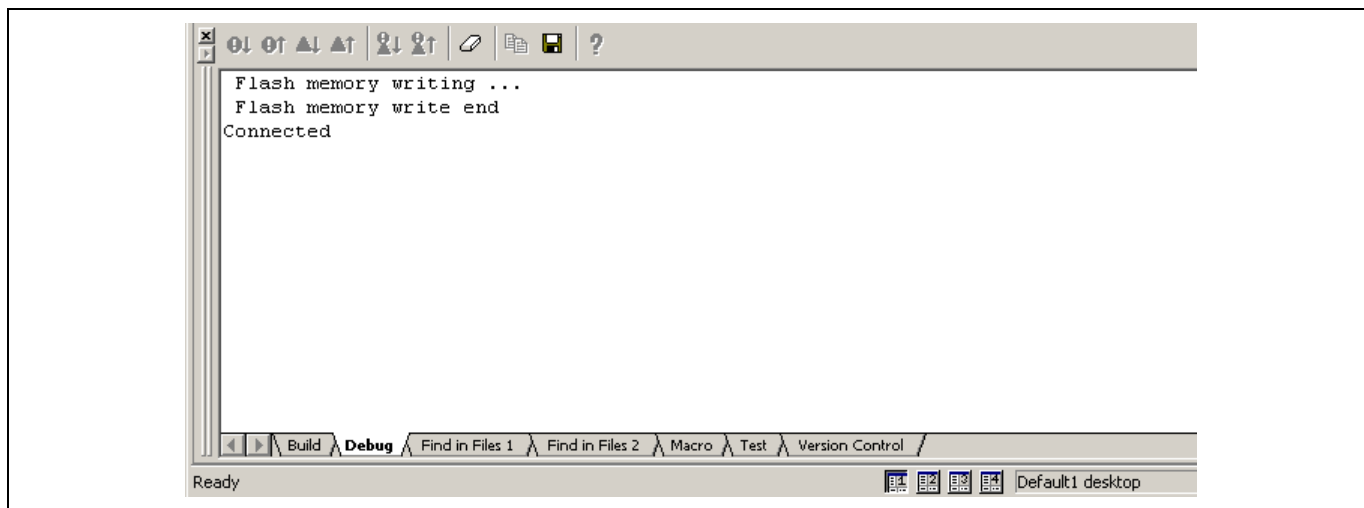


Figure 3.10 [Output] Window

4. E10A-USB Emulator Connection Error Dialog

When the E10A-USB emulator does not start up, the following dialog box will appear.

- (a) When the dialog box appears, the CPU board system power may not be supplied. Check the power supply of the CPU board.

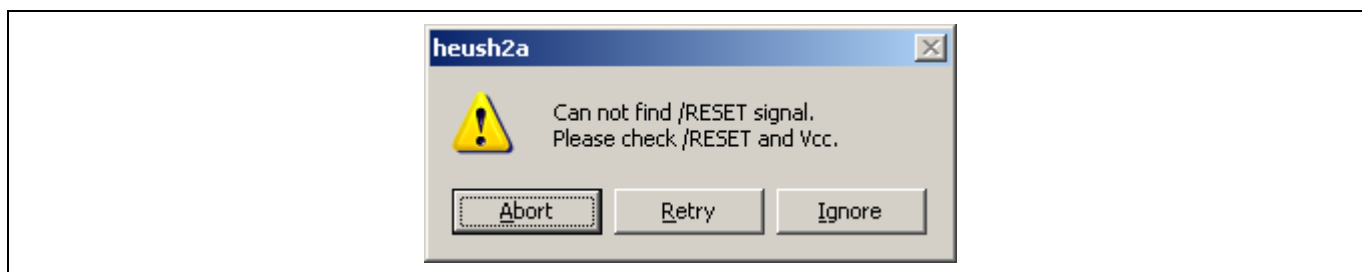


Figure 4.1 [Cannot find/RESET signal] Dialog Box

- (b) When the following dialog box appears, the H-UDI pins and the H-UDI port connector may not be connected correctly. Check the connection between the H-UDI pins and the H-UDI port connector.

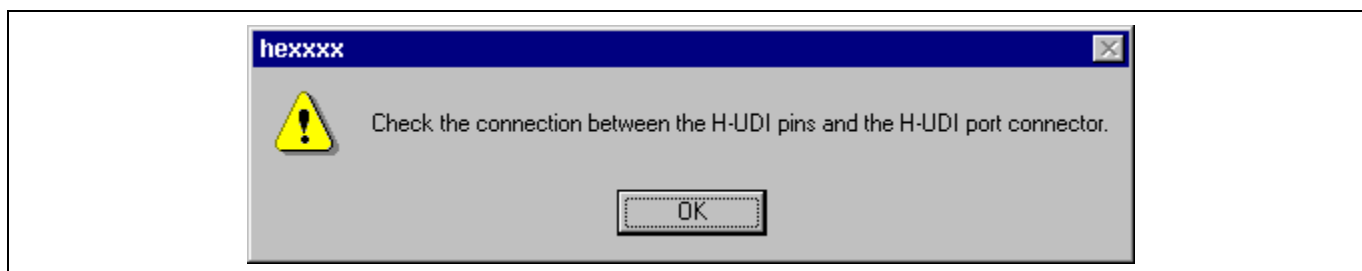


Figure 4.2 [Check the connection] Dialog Box

- (c) When the following dialog box appears, the E10A-USB emulator firmware may not be set up correctly. Use the setup tool or the license tool to for device group addition to set up the firmware for the device group to use.



Figure 4.3 [The Product Currently Connected] Dialog Box

- (d) When the following dialog box appears, the version of the firmware set up in the E10A-USB emulator may be old. Use the setup tool to set up the appropriate version of the firmware.

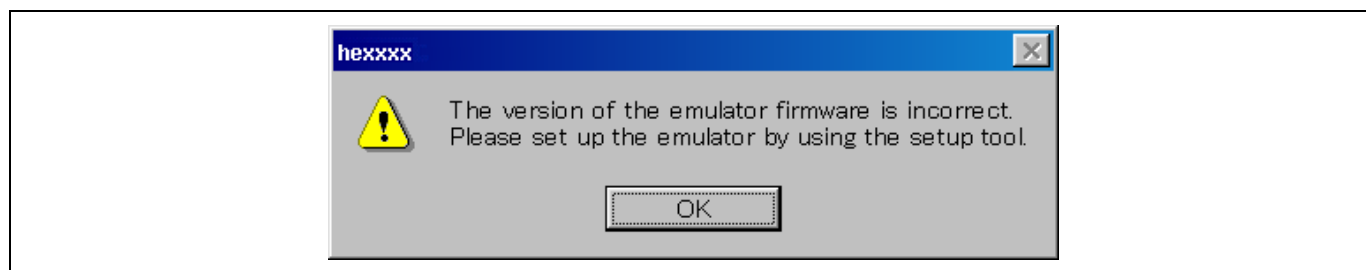


Figure 4.4 [The version of the emulator firmware is incorrect] Dialog Box

- (e) If the driver has not been set up correctly, the following dialog box will appear.



Figure 4.5 [Unable to restore the previous driver setting] Dialog Box

5. Downloading the Sample Program

This section describes how to download the load module of the sample program.

(1) Download the sample load module

Select [Debug] menu, -> [Download Modules] to select the sample load module "sample.abs". Figure 5.1 shows the download operation window.

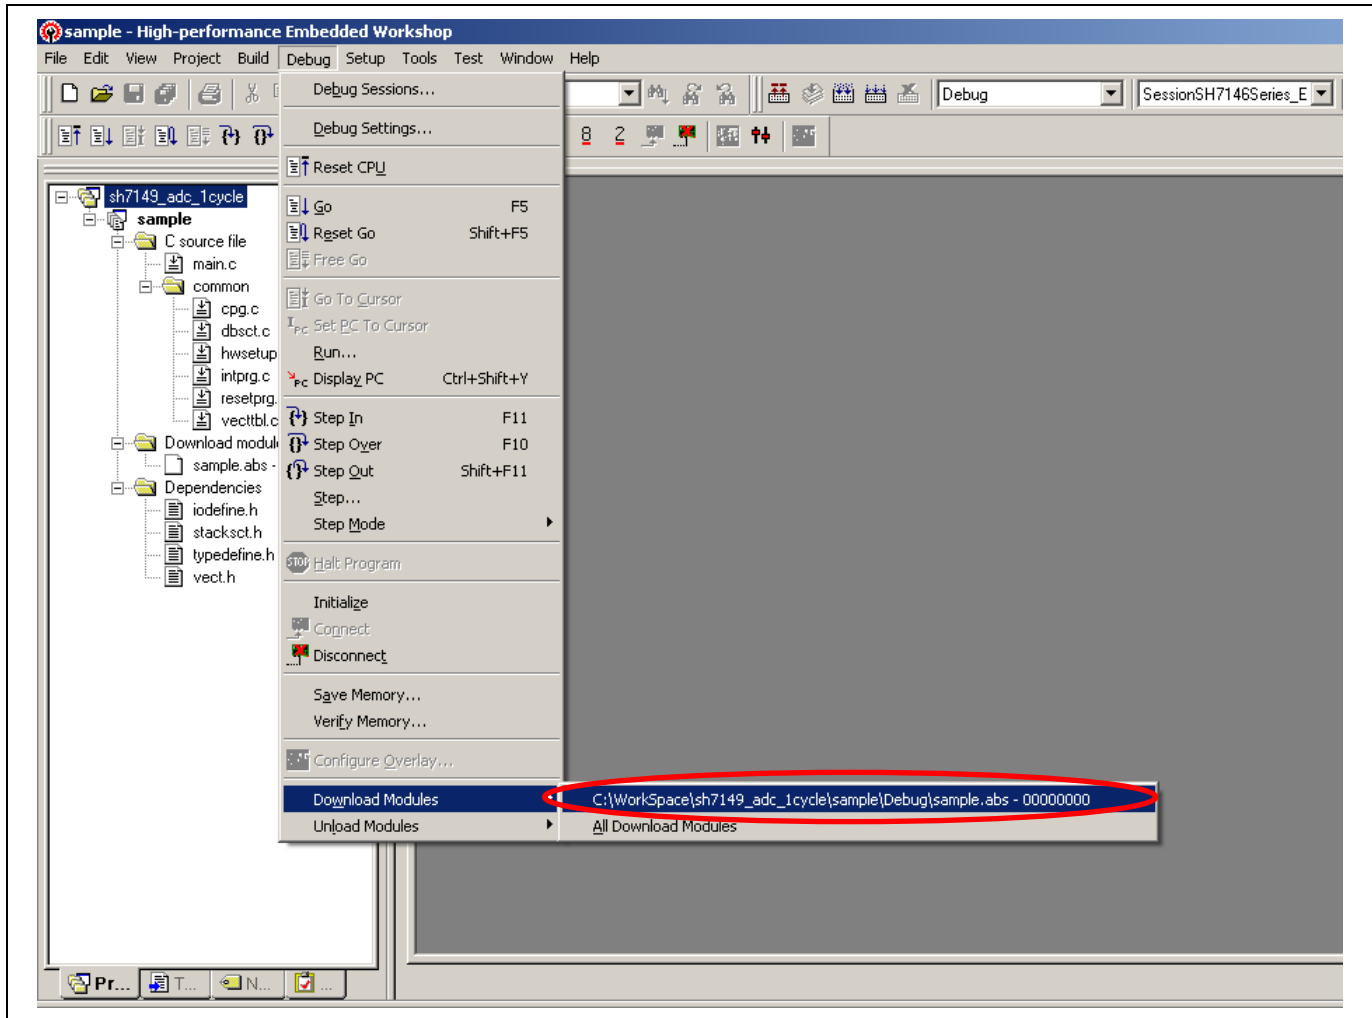


Figure 5.1 [Download Operation] Window

(2) Download completed

When downloading the sample load module is completed, the program counter will appear in the "resetprg.c" (See Figure 5.2).

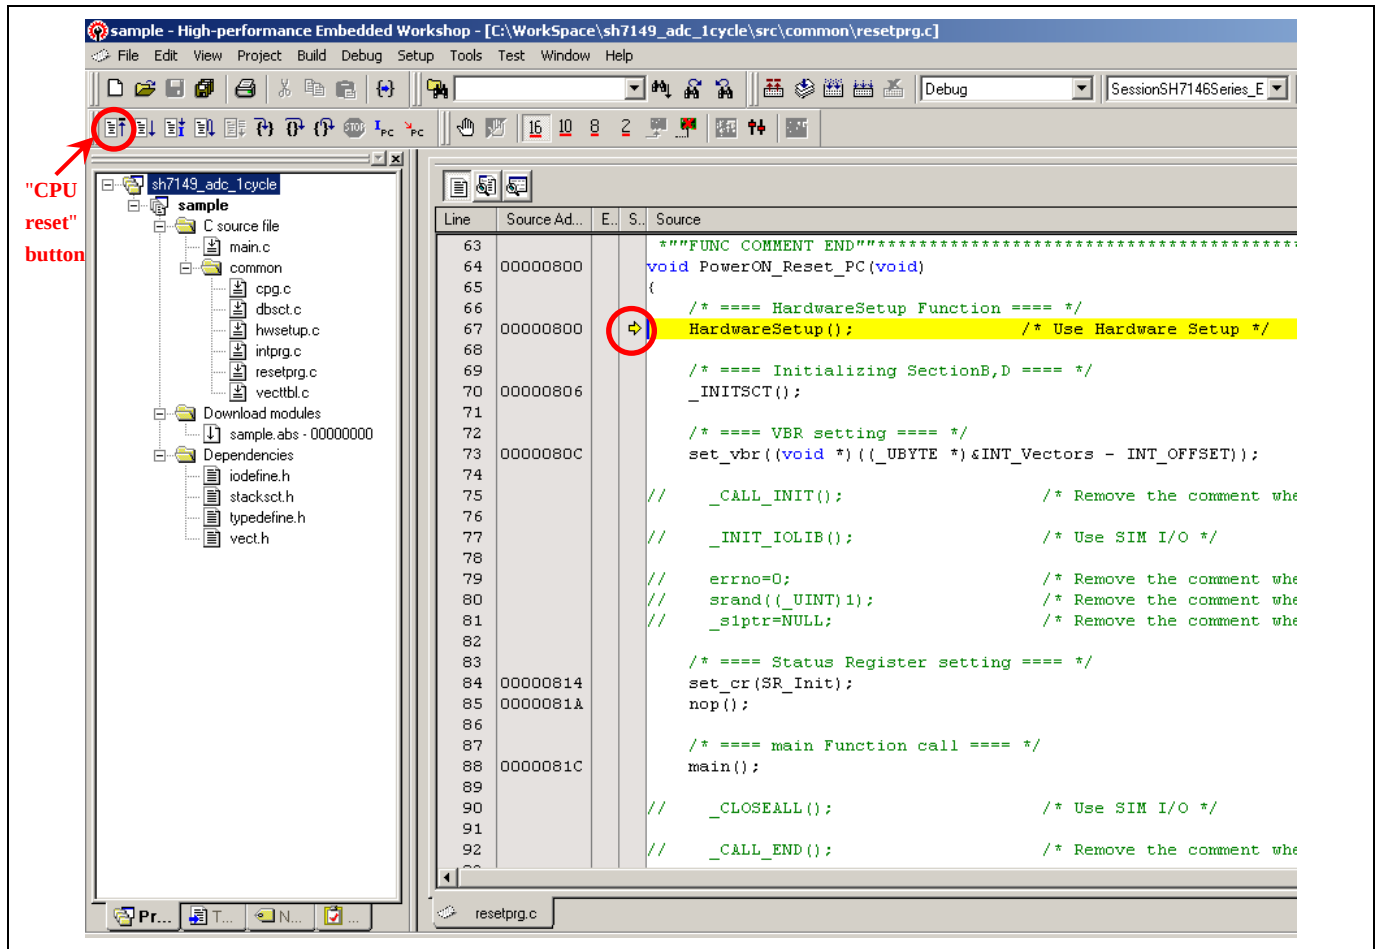


Figure 5.2 [Download Completion] Window

Note: Press the "CPU reset" button of the High-performance Embedded Workshop to show the program counter.

(3) Execute the program

Select "Go" from the [Debug] menu to execute the program (See Figure 5.3).

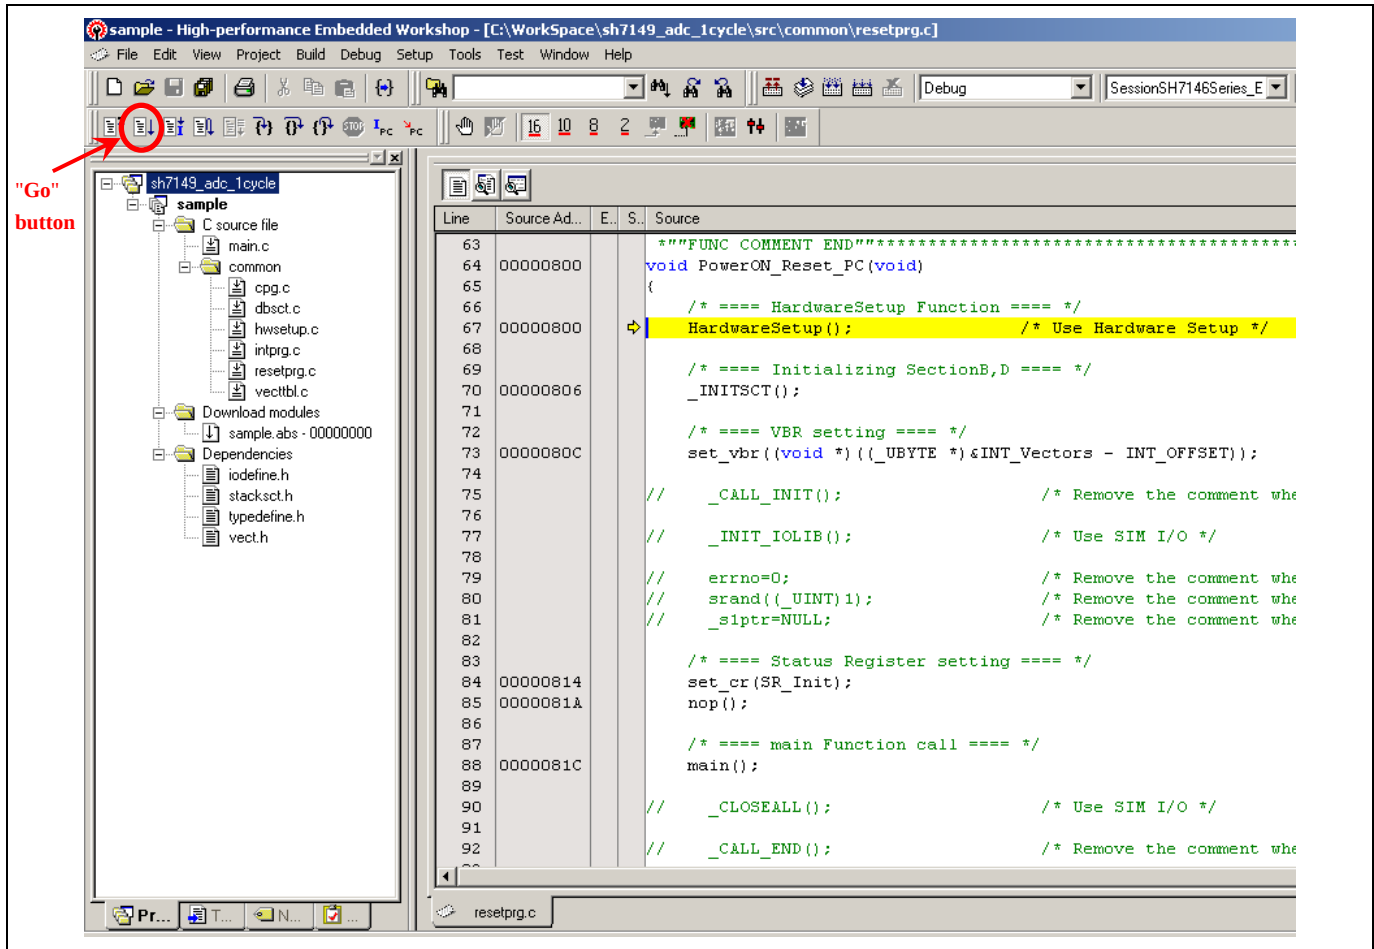


Figure 5.3 Executing the Program

Notes:

- (1) The contents of the "resetprg.c" may depend on the version of the sample program.
- (2) If an error occurs or the sample software does not operate correctly, the hardware or software may not have been set up correctly. Check the setup procedures described in the installation manual.

6. More Information

MCU Evaluation Board User's Manual

SH7149 CPU Board (M3A-HS49) User's Manual (REJ10J0917-0100/Rev.1.00)

Hardware Manual

SH7146 Group Hardware Manual (REJ09B0229-0300/Rev.3.00)

Reference Application Note

SH7145 Group: A/D Conversion in Continuous Scan Mode (REJ06B0390-0100Z/Rev.1.00)

Note: Use the latest version on the Renesas Technology Website when referring to the manual.

Website and Support

Renesas Technology Website

<http://www.renesas.com/>

Inquiries

<http://www.renesas.com/inquiry>

csc@renesas.com

Revision History

Rev.	Date	Description	
		Page	Summary
1.00	Mar.11.09	—	First edition issued

All trademarks and registered trademarks are the property of their respective owners.

Notes regarding these materials

1. This document is provided for reference purposes only so that Renesas customers may select the appropriate Renesas products for their use. Renesas neither makes warranties or representations with respect to the accuracy or completeness of the information contained in this document nor grants any license to any intellectual property rights or any other rights of Renesas or any third party with respect to the information in this document.
2. Renesas shall have no liability for damages or infringement of any intellectual property or other rights arising out of the use of any information in this document, including, but not limited to, product data, diagrams, charts, programs, algorithms, and application circuit examples.
3. You should not use the products or the technology described in this document for the purpose of military applications such as the development of weapons of mass destruction or for the purpose of any other military use. When exporting the products or technology described herein, you should follow the applicable export control laws and regulations, and procedures required by such laws and regulations.
4. All information included in this document such as product data, diagrams, charts, programs, algorithms, and application circuit examples, is current as of the date this document is issued. Such information, however, is subject to change without any prior notice. Before purchasing or using any Renesas products listed in this document, please confirm the latest product information with a Renesas sales office. Also, please pay regular and careful attention to additional and different information to be disclosed by Renesas such as that disclosed through our website. (<http://www.renesas.com>)
5. Renesas has used reasonable care in compiling the information included in this document, but Renesas assumes no liability whatsoever for any damages incurred as a result of errors or omissions in the information included in this document.
6. When using or otherwise relying on the information in this document, you should evaluate the information in light of the total system before deciding about the applicability of such information to the intended application. Renesas makes no representations, warranties or guarantees regarding the suitability of its products for any particular application and specifically disclaims any liability arising out of the application and use of the information in this document or Renesas products.
7. With the exception of products specified by Renesas as suitable for automobile applications, Renesas products are not designed, manufactured or tested for applications or otherwise in systems the failure or malfunction of which may cause a direct threat to human life or create a risk of human injury or which require especially high quality and reliability such as safety systems, or equipment or systems for transportation and traffic, healthcare, combustion control, aerospace and aeronautics, nuclear power, or undersea communication transmission. If you are considering the use of our products for such purposes, please contact a Renesas sales office beforehand. Renesas shall have no liability for damages arising out of the uses set forth above.
8. Notwithstanding the preceding paragraph, you should not use Renesas products for the purposes listed below:
 - (1) artificial life support devices or systems
 - (2) surgical implantations
 - (3) healthcare intervention (e.g., excision, administration of medication, etc.)
 - (4) any other purposes that pose a direct threat to human lifeRenesas shall have no liability for damages arising out of the uses set forth in the above and purchasers who elect to use Renesas products in any of the foregoing applications shall indemnify and hold harmless Renesas Technology Corp., its affiliated companies and their officers, directors, and employees against any and all damages arising out of such applications.
9. You should use the products described herein within the range specified by Renesas, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas shall have no liability for malfunctions or damages arising out of the use of Renesas products beyond such specified ranges.
10. Although Renesas endeavors to improve the quality and reliability of its products, IC products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Please be sure to implement safety measures to guard against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other applicable measures. Among others, since the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or system manufactured by you.
11. In case Renesas products listed in this document are detached from the products to which the Renesas products are attached or affixed, the risk of accident such as swallowing by infants and small children is very high. You should implement safety measures so that Renesas products may not be easily detached from your products. Renesas shall have no liability for damages arising out of such detachment.
12. This document may not be reproduced or duplicated, in any form, in whole or in part, without prior written approval from Renesas.
13. Please contact a Renesas sales office if you have any questions regarding the information contained in this document, Renesas semiconductor products, or if you have any other inquiries.